

# Product information- SWAP series



Want an simple way to control overflow in overhead tank? Check out the SWAP04-OF (Overflow controller)! Learn more about it on pages 3-5

## SWAP

Auto OFF Timers



Cyclic Timers



Automatic level controller & flow detector



**SWAP** To Save water and power...



E-mail : [info@eviqds.com](mailto:info@eviqds.com)  
Website : [www.eviqds.com](http://www.eviqds.com)

Contact : +91 9629900110  
+91 9443410073



Auto-OFF Timers Product codes

1. SWAP01
2. SWAP01E
3. SWAP02
4. SWAP02E

Cyclic Timers

Product codes

1. SWAP03C
2. SWAP03AC
3. SWAP03ACF
4. SWAP03ACF-SA


Automatic level & flow controllers

Product codes

1. SWAP04-OL
2. SWAP04-OLF
3. SWAP04-C-OL
4. SWAP04-C-OLF
5. SWAP04-SOL
6. SWAP04-C-SOL
7. SWAP04-C-SOFL
8. SWAP04-SMFL
9. **SWAP04-OF**

**SWAP** *Save water and power...*

# Product with 2 Module/1 Gang-Surface mount box installation

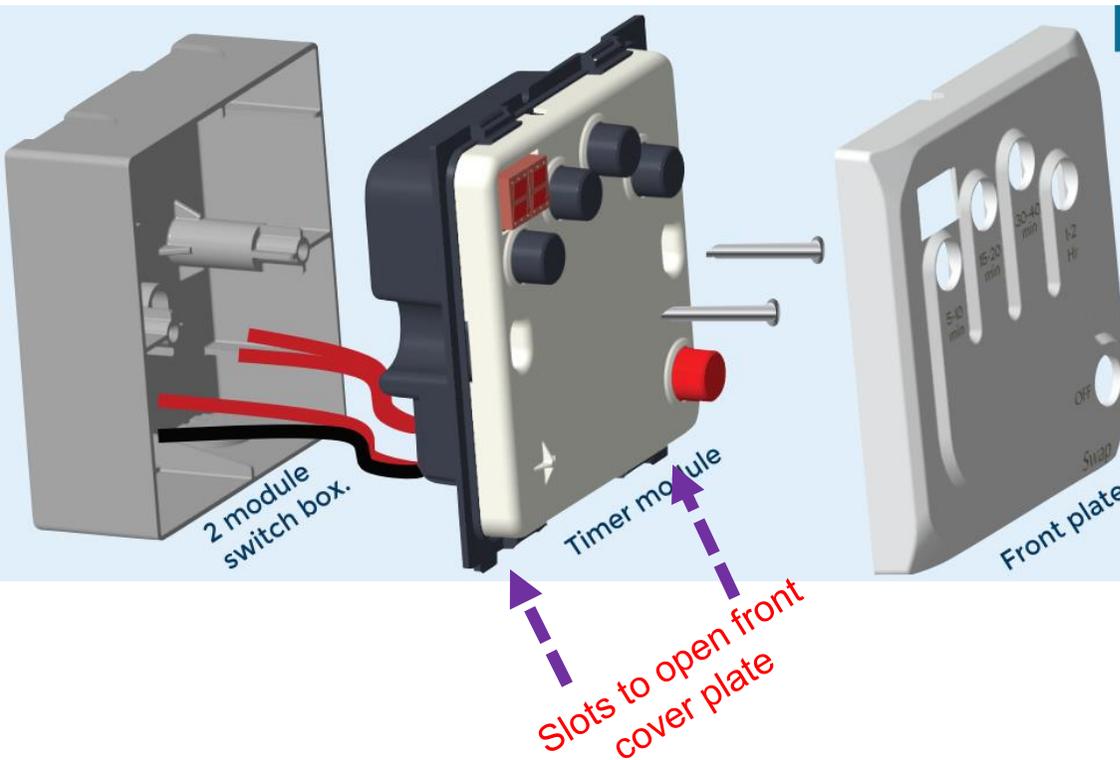

## Step 1

Fix the 2 module box on wall & finish the wiring with **SWAP** terminals(Refer upcoming slides)



## Step 2

Remove the front cover from the product using the slots provided and fix the product onto the 2 module box, using screws.

## Step 3

Fit the removed front cover plate, back onto the product.

# Product & Connection details of **SWAP04-OF(Over flow controller)** for **Mono-block & Jet Pumps**

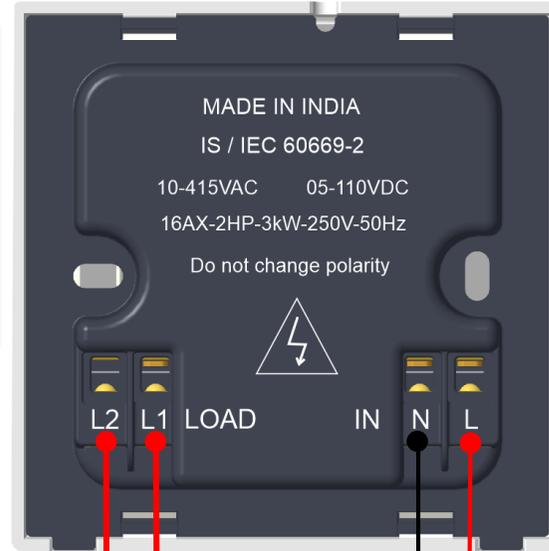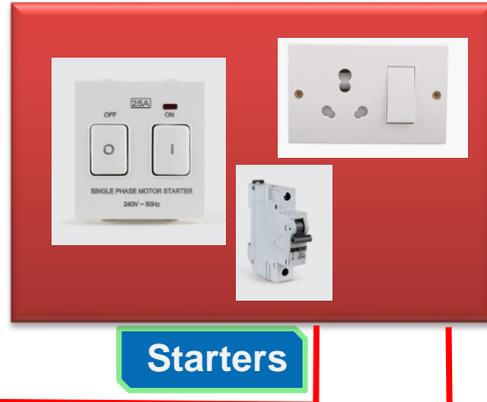

## Recommended wire cross section

Connection Terminals	0.25 - 1 hp (mm <sup>2</sup> )	1-2 hp (mm <sup>2</sup> )
L1 & L2	1.5	2.5
L & N	1/1.5	

After installation, select the desired time on the SWAP Auto OFF Timer, then switch ON the MCB/Switch /Push Starter as stated in the picture to start the motor. To select other time option while the current cycle is running, press the red button and select the time of your choice.



Available time selections - 5 or 10 min, 15 or 20 min, 30 or 40 min, 1 or 2 Hours. **Saves water and power. Featured with Auto-execution** of the remaining time, in case of power interruption.



While making wiring connection first disconnect the power.


- Line/ Phase
- Neutral
- Earth

L  
E  
N } **Main supply**



**It is an Automatic level controller by default**

# Product & Sensor integration details of **SWAP04-OF(Over flow controller)** for **Mono-block & Jet Pumps**

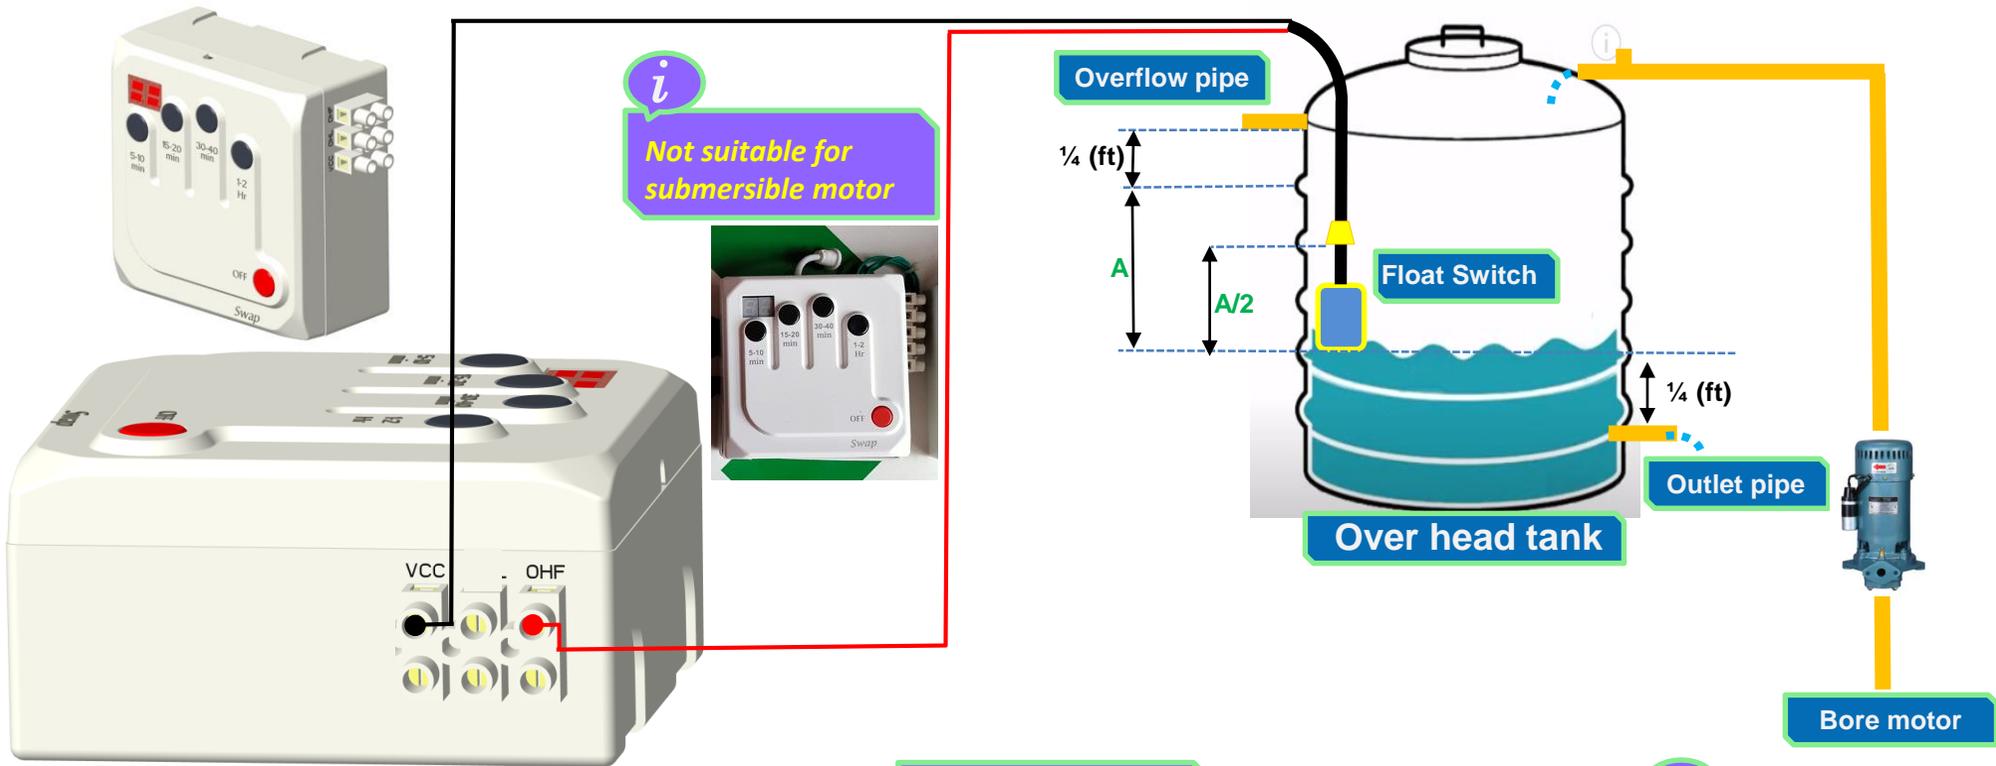

*Not suitable for submersible motor*

## Product features

1. Auto OFF timer with automatic overflow controller.
2. Automatic off timer with feature for Auto-execution of the remaining time in case of power interruption.

## Product function

*Manually switch ON the motor- It will automatically switch OFF the motor after the selected time or if the tank water reaches its overflow limit .*

*For submersible pump Controller version. Please contact Us. Thanks.*